 



Videos

- To watch videos**
1. Select “**videos**” from the main menu and press the [MENU] button to confirm.
 2. Use the [◀◀] or [▶▶] button to select a video and press the [MENU] button to start playing the selected video.
- Pausing playback**
1. While a video is playing, press the [MODE] button to pause the playback.
 2. To resume the playback, press the [MODE] button once again.
- Skipping videos**
1. Press the [▶▶] button to skip forward to the next video.
 2. Press the [◀◀] button to skip back to the previous video.
- Searching backward or forward within a video**
1. Press and HOLD the [◀◀] button to rewind within a video.
 2. Press and HOLD the [▶▶] button to fast forward within a video.
- Adjusting the volume**
- *See “Basic operation”.
- Video Menu**
1. While in playback mode, press the [MENU] button at any time to access the video repeat mode menu. Press the [MENU] button again to open the menu.
 2. Press the [◀◀] or [▶▶] button to select an option and press [MENU] to confirm your choice.
 3. To return to video playback mode without making a selection, press the [MODE] button.

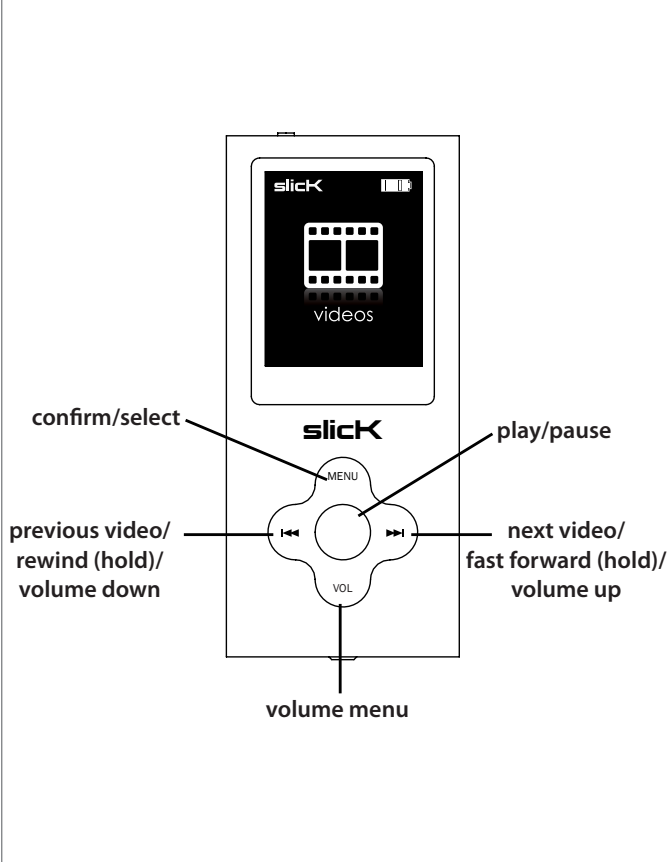


Video Converter

 - Before transferring video files to the MP3 Player, you must convert them to the correct format. Use the Video Converter provided on the included CD to convert most video files to the correct format suitable for the player.
1. Insert the CD into CD drive of your computer.
 2. Click on “**User Guide**” to view instructions on how to convert videos.
 3. Close the instructions.
 4. On the home screen click on “**Video Converter**”.
 5. Click on “**Open**” and the video converter will appear.
 6. Follow the instructions to convert videos.

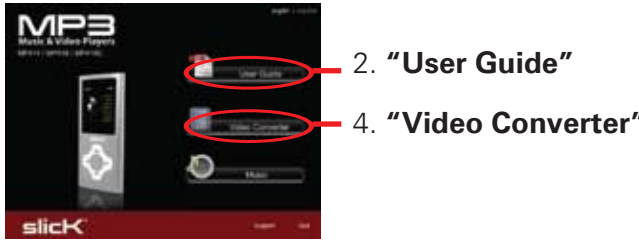


Photos and radio

 - To view photos**
1. Select “**photos**” from the main menu and press the [MENU] button to confirm.
 2. Press the [◀◀] or [▶▶] button to select a folder to open or photo to view and press the [MENU] button to open the photo.
 3. If a folder is opened, use the [◀◀] or [▶▶] button to select a photo and press [MENU] to view the photo.
 4. Press the [MODE] button to return to the previous folder.
- FM digital radio**
1. Select “**radio**” from the main menu and press the [MENU] button to confirm.
 2. Press the [◀◀] or [▶▶] button to manually tune the FM radio dial.
 3. Press the [◀◀] or [▶▶] for one full second to scan to the next or previous available station.
 4. Press the [MENU] button to enter the radio options menu where you can save preset stations, autoscan for stations or record FM radio.
- Note:** recorded FM radio will be saved in the “voice” section of the main menu.*

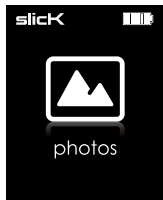


Record and voice memos

 - Recording voice memos**
1. Select “**record**” from the main menu and press the [MENU] button to confirm. The player starts recording automatically.
 2. To pause the recording, press the [MODE] button.
 3. To resume recording within the same file, press the [MODE] button again.
 4. To stop recording and save the voice memo, press and HOLD the [MENU] button. The player will return to the main menu.
- Listening to voice memos and FM recordings.**
1. Select “**voice**” from the main menu and press the [MENU] button to confirm.
 2. Scroll to the memo you would like to hear and press the [MENU] button to confirm.
- Note:** Voice memos will start with a MIC designation and FM radio recordings will start with a FM designation.*
3. Press the [MODE] button to pause playback.
 4. Press the [MODE] button again to resume playback.
 5. Press the [◀◀] or [▶▶] button to skip to the previous or next recording.
 6. Press and HOLD the [◀◀] or [▶▶] button to rewind or fast forward within a recording.
 7. Press the [MENU] button during playback to enter the recording sub-menu where you can change how you listen to the recordings.

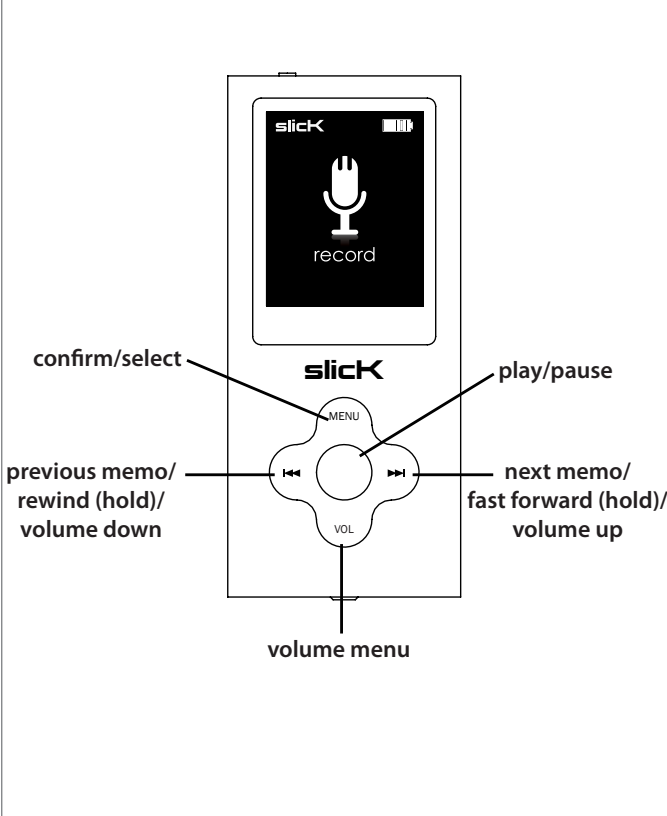


Delete

 - There are three ways to delete files from the player.
- Delete section:**
1. Select “**delete**” from the main menu and press the [MENU] button to confirm.
 2. Scroll to the file you would like to delete and press the [VOL] button to open the delete screen.
 3. Press the [◀◀] or [▶▶] button to select Yes or No and press the [MENU] button to confirm.
- File Browsing**
1. While in any music, video, photo or voice menu simply scroll to the file you would like to delete and press the [VOL] button to open the delete screen.
 2. Press the [◀◀] or [▶▶] button to select Yes or No and press the [MENU] button to confirm your choice.
- On your computer**
1. Connect the MP3 Player to your computer, and locate “**MP3**”.
 2. Open “**MP3**” by double clicking on it.
 3. Locate the file you would like to delete and RIGHT click on the file.
 4. Locate “**Delete**” and LEFT click on the selection.
 5. Select Yes or No to confirm or deny deletion of the file.

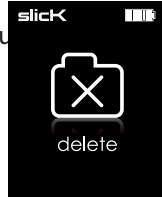

System settings

 - Select “**settings**” from the main menu and press the [MENU] button to confirm.
- System Settings options:**
- Time:** Change the date and time displayed on the player.
- Power:** Set the Auto-Off timer. This timer turns the player off after the chosen period of inactivity to conserve battery power. Choose “Close” to disable Auto-Off timer.
- Language:** Change the display language of the player.
- Display Setting:** Change how long the backlight stays on. Choose “Close” to disable the backlight auto-off.
- Record Setting:** Change the microphone recording type and quality.
- System Tools:** Format, reset or view system information.

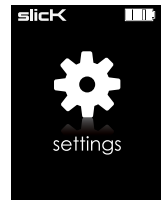

Legal information

FCC Part 15:

This equipment has been tested and found to comply with the requirements for a Class B digital device under Part 15 of the Federal Communications Commission (FCC) rules. These requirements are intended to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Re-orient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Do not attempt to repair or modify this equipment.

Warning: Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

*This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.”

Copyright Information:

Trademarks and trade names used in this instruction manual are owned by their respective companies or organizations.

Unauthorized duplication of any recordings whether downloaded from the Internet or made from audio CDs is a violation of copyright laws and international treaties. The making of unauthorized copies of copy-protected material, may be an infringement of copyrights and constitute a criminal offense. This equipment should not be used for such purposes.

Troubleshooting

- Can not power on**
- The battery may be exhausted, please recharge the battery.
- Files can not be transferred to the player**
- Check if the driver is installed correctly in the computer by disconnecting and then reconnecting the player to the computer
 - Check the connection between the player and PC, and confirm the USB cable is properly connected.
- No sound from the headphones**
- Please ensure the volume is turned up, and the headphones are properly connected.
 - Check if the format of music file is supported by the player.
- Can not record**
- Check if there is enough memory and battery capacity.
 - Display is in the wrong language
 - Please ensure you selected the correct language from the “Settings” menu.
- The buttons do not work**
- Slide the [POWER] switch to the left to unlock the player.
- I cannot display my .jpg files**
- Many digital cameras and image editing softwares add hidden data to the .jpg files. This data can prevent the player from loading the images. Try to eliminate them by saving the file with another name.

Warranty

- In the unlikely event that this product is defective, or does not perform properly, you may within ninety (90) days from your original date of purchase return it to the authorized service center for repair or exchange.
- TO OBTAIN WARRANTY SERVICE:**
- Provide proof of the date of purchase within the package (Dated bill of sale)
 - Prepay all shipping costs to the authorized service center, and remember to insure your return.
 - Include a return shipping address (no P.O. Boxes), a telephone contact number, and the defective unit within the package.
 - Describe the defect or reason you are returning the product. Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service center determines this product is defective. Products received damaged as a result of shipping, will require you to file a claim with the carrier.

- The shipping address of the authorized service center is:
- Southern Telecom, Inc.**
ATTN: Returns Department
14-C 53rd Street Brooklyn, NY 11232
- Should you have any questions or problems concerning this product, please contact our customer service department at:
- Customer Support:**
☎ 1-877-768-8483 (Toll Free)
✉ cs@southerntelecom.com
- Monday - Thursday: 9AM - 5PM (EST)**
Friday: 9AM - 3PM (EST)